

# BLTL BriteCor AC Direct Linear Task Light Installation Manual



## BLTL Linear Task Light Installation Manual

### **NOTES**

- WARNING – Risk of fire or electric shock.
- WARNING – It is recommended that installation be performed by a certified electrician.
- WARNING – All electrical connections must be in compliance with local codes, ordinances or the national electrical code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- WARNING – DO NOT connect this Luminaire to an electrical system that does not provide means for equipment grounding. Never use a fixture in a two-wire system that is not grounded.
- WARNING – DO NOT use excessive force when manipulating cables and wires.
- WARNING – To prevent wiring damage or abrasion, DO NOT pinch wires between surfaces.
- WARNING – Only connect luminaire to 120VAC power outlet. It is intended for direct connection to this voltage. DO NOT connect to a different or unknown voltage.
- WARNING – DO NOT modify luminaire, plug, or mounting hardware.

### **CONTENTS OF KIT**


- BriteCor Linear Task Light
- PKG Mounting Kits (MAG and ARM)
- MAG Magnet Mount Kit Includes:
  - (2) magnets
  - (2) M6 square nuts
- ARM Mounting Arm Clamp Kit Includes:
  - (1) Mounting arm
  - (1) ½-20 bolt
  - (1) ½-20 threaded spacer (attached to arm)

Document #: 11-00053	Rev: -	Date: 8/31/2022
----------------------	--------	-----------------

# LiteSheet Solutions

## **Magnet Mount Kit Guide**

1. Insert (2) M6 square nuts into one of the channels on the Luminaire. Attach and hand tighten the magnets to the M6 nuts.

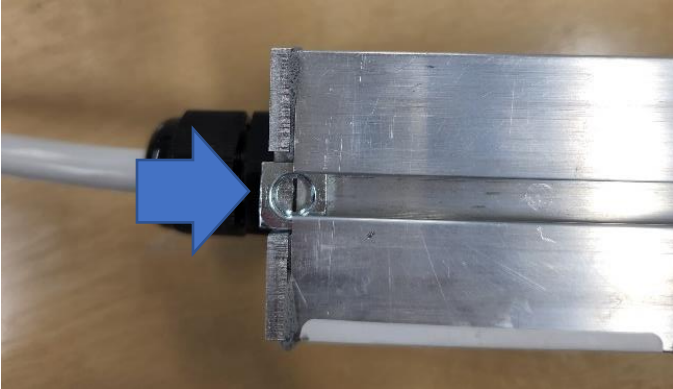

## BLTL Linear Task Light Installation Manual

2. Attach luminaire to desired surface. Plug the luminaire into an outlet to power on the fixture.





3. Unplug power cable before moving the luminaire.

# LiteSheet Solutions

## Arm Mount Kit Guide

1. Insert the ¼-20 bolt into one of the channels on the luminaire into one of the channels. Arm should be mounted in the center as shown.

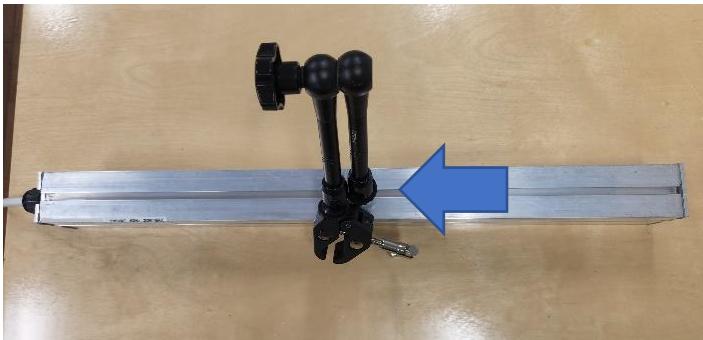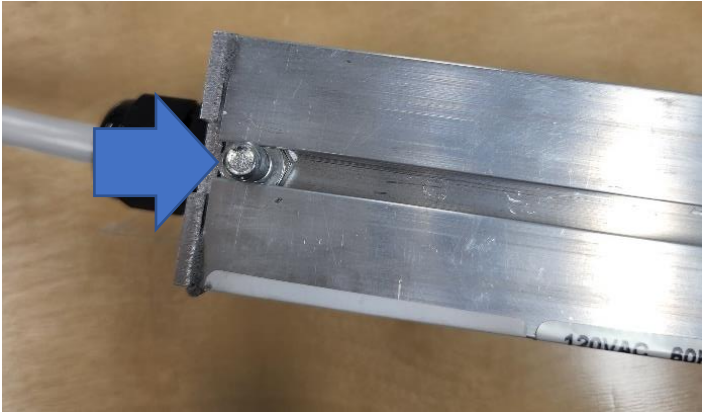

## BLTL Linear Task Light Installation Manual

2. Attach luminaire to desired surface using the clamp. NOTE: Clamp needs to be fully tightened to avoid the luminaire falling off. Tighten at all three points shown. Do not overtighten to avoid cracking the hardware.



3. Unplug the luminaire before moving the luminaire.

# LiteSheet Solutions

**For warranty information and  
technical support, contact us at:**

**434-446-1460**

**Find more great products at:**

**[www.litesheet.com](http://www.litesheet.com)**