

BAA BriteCor AC Direct Area Light Installation Manual



Proudly Made in the USA
of US and imported parts



BAA BriteCor Area Light Installation Manual

NOTES

- WARNING – Risk of fire or electric shock.
- WARNING - It is recommended that installation be performed by a certified electrician.
- All electrical connections must be in compliance with local codes, ordinances or the national electrical code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Do not connect this Luminaire to an electrical system that does not provide means for equipment grounding. Never use a fixture in a two-wire system that is not grounded.
- If dimming functionality is included, use only with Litesheet approved dimmers.
- This unit is not approved for use in ducted ceilings.
- Do not use excessive force when manipulating cables and wires.
- WARNING – To prevent wiring damage or abrasion, do not pinch wires between surfaces.
- WARNING – If Luminaire is rated for retrofitting, do not connect Luminaire kit to the lamp ballast or the lamp holders.
- WARNING – Only connect Luminaire to the voltage indicated by the Luminaire label. It is intended for direct connection to this voltage. DO NOT connect to a different or unknown voltage.

Document #: 11-00048	Rev: A	Date: 4/19/2022
----------------------	--------	-----------------



LiteSheet Solutions

CONTENTS OF KIT

- BAA Area Light Luminaire
- Mounting Bracket
- Extra #8 screws for attaching access plate


TOOLS AND ADDITIONAL PARTS REQUIRED

- #2 Phillips Screw Driver
- ¼" Drive

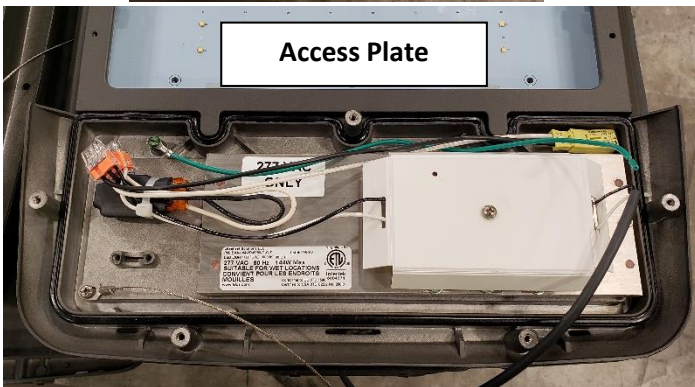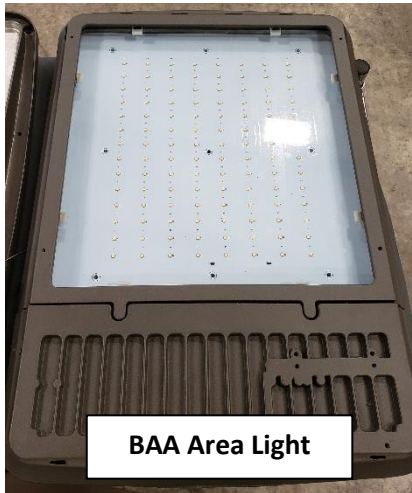

Preparation

1. Turn off power source.
2. Attach the mounting bracket through the screw holes on the fixture.

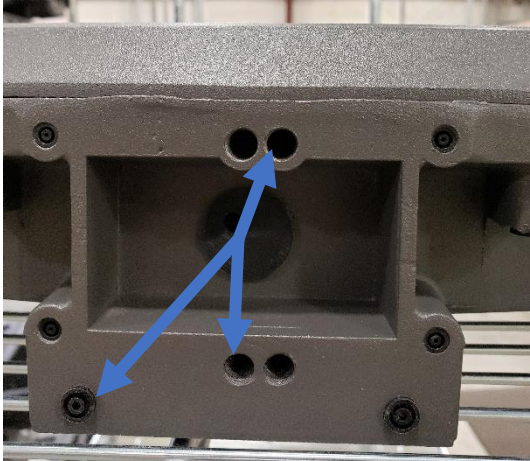


3. Attach any other supplemental mounting hardware as provided.


LiteSheet Solutions

Installation

1. Mount the luminaire using the bracket provided (NOTE: Bracket may be different than the one pictured.) Route the incoming line power through the access port.

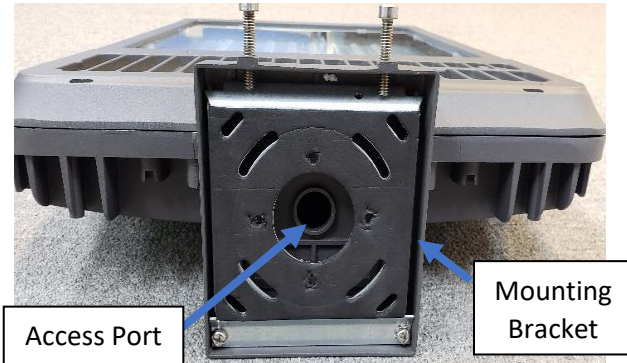

2. Remove the 2 screws on top of the fixture shown. Support the access plate on the opposite end of the fixture to prevent it from falling once loosened. A bag with 3 additional screws should also be in the housing for remounting the access plate.

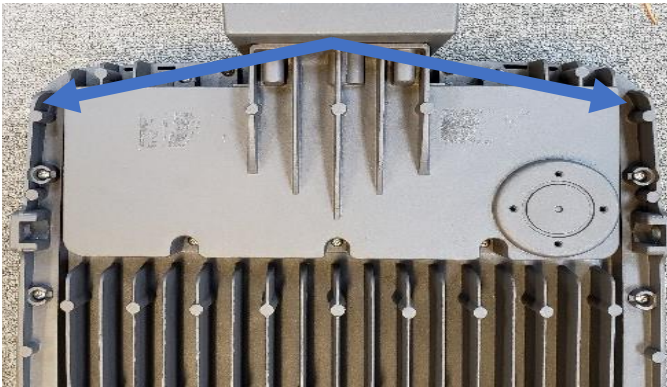


BAA BriteCor Area Light Installation Manual

3. Connect the incoming ground connection to the green ground screw provided. Connect the incoming line power to the luminaire connector provided.
 - Black – Line Power (Hot)
 - White – Neutral
 - Green – Safety Ground



4. Reattach the access plate, using caution not to pinch wires between surfaces. Tighten the 5 screws in the order shown. Screws may need to be tightened again as the gasket compresses to insure an even seal.

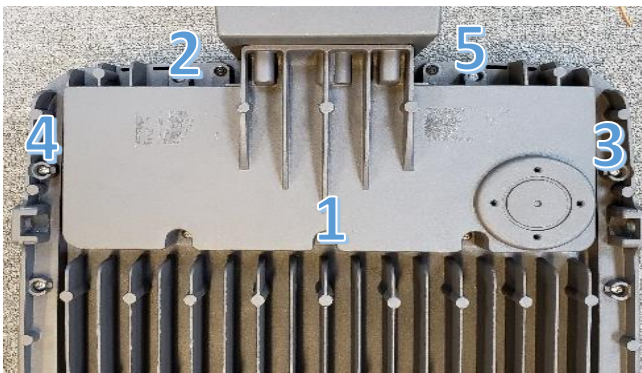

LiteSheet Solutions

**For warranty information and
technical support, contact us at:**

434-446-1460

Find more great products at:

www.litesheet.com